



INSTRUCTIONS

Coffee Maker

WARNING: DO NOT USE AN EXTENSION CORD. Plug the coffee pot into a standard electrical outlet.

- Fill the coffee pot with **COLD** water to the desired amount.
- Add coffee to the basket (see equivalents below).
- When the coffee has finished brewing, remove the basket. The pot will keep the coffee hot.

CLEANING

- **NEVER IMMERSE COFFEE POT IN WATER.**
- Rinse out the coffee pot and basket before returning.
- Always return your coffee pot clean to avoid additional cleaning charges.

BREWING TIME

- It takes approximately ½ hour to brew the coffee in a 30 to 60 cup urn.
Approximately 1 hour in a 90 to 100 cup urn.

COFFEE EQUIVALENTS

<u>Number of Cups</u>	<u>Coffee Measure</u>
30	2 Cups
55 to 60	3-1/2 Cups
90	6 Cups

One pound of coffee is equal to approximately 4-3/4 cups of ground coffee.