



INSTRUCTIONS

Convection Oven Propane

NOTE: Always use in a well-ventilated area - **OUTDOOR USE ONLY.**

1. Make sure oven gas hose is attached to the propane tank securely.
2. Make sure the propane is turned **ON**.
3. Make sure oven is plugged in.
4. Turn the black mode switch to **HIGH OR LOW**.
5. Set the temperature knob to the desired setting.
6. Keep the red switch on auto setting.

IMPORTANT NOTE: Before the oven pilot burner will light, **ALL AIR MUST BE PURGED FROM THE PILOT.**

7. You will hear a sparking sound; the oven is attempting to light the pilot burner.
8. **BURNER MAY NOT LIGHT ON THE FIRST ATTEMPT!**
9. If the “**RED INDICATING LIGHT**” does not come on during the first 60 seconds or when the sparking sound stops, turn “**MODE SWITCH**” to **OFF**, wait 10 seconds, and then repeat process from step 4.
10. It may be necessary to repeat several times to purge pilot burner gas line.
11. When the “**RED INDICATING LIGHT**” comes **ON**, the oven is calling for heat and the burner is **ON**.
12. When the “**RED INDICATING LIGHT**” goes **OFF**, the oven is at temperature and the burner is **OFF**.
13. The “**RED INDICATING LIGHT**” will cycle **ON** and **OFF** as the thermostat calls for heat.
14. When cooking is complete, turn the “**MODE SWITCH**” to **OFF**.

WARNING: A COMPLETE 5-MINUTE SHUTDOWN MUST BE OBSERVED BEFORE THE OVEN CAN BE RE-LIT.

