



# INSTRUCTIONS

## Cotton Candy Machine

**WARNING: DO NOT USE AN EXTENSION CORD.**

**DO NOT** put hands or objects in or near rotating spinner head of the machine while it is operating. Keep foreign objects out of the head. For safety, always use a floss bubble.

**DO NOT** fill spinner head with sugar while it is rotating.

- Wear Eye Protection
- Use Floss Cone to Collect Cotton Candy
- With **Main Switch still OFF**, fill floss head about 90% full with sugar (**do not overfill**). While filling, there may be a vibration type noise until the head is full. Whenever you add sugar to the floss head, always fill it about 90% full.
- **NEVER ADD SUGAR WHEN THE MOTOR IS NOT RUNNING.**
- Before turning the power on, manually turn the head to balance out the sugar. This will eliminate excessive vibration of the head.
- Plug in floss machine, turn "**Main Power & Heat**" switch to **ON** position.

**CAUTION:** Never operate the equipment for a prolonged period of time with the **HEAT CONTROL** in a position that causes the sugar to smoke. This will result in excessive carbonization of the ribbon (heat element). If you smell burning sugar or see smoke, reduce the heat.

- Turn "**Heat Range**" knob to **Position "A"**. Rotate "**Heat Control Fine Tuning**" knob to maximum position (**Position #8**). This will produce the fastest possible ware up. You should start making floss in a few seconds. When the unit gets up to heat, it will probably start to smoke. Reduce the "**Heat Control Fine Tuning**" setting to eliminate the smoke. If smoke continues, turn the "**Heat Range**" switch knob to **Position "B"**, and set the "**Heat Control Fine Tuning**" knob to **Position #8**. If smoke still continue, reduce the "**Heat Control Fine Tuning**" setting and if necessary, turn "**Heat Range**" knob to **Position "C"**.

**NOTE:** You can fine tune in all three (3) heat range positions.

Once you find the ideal setting for the “*Heat Range*” switch and “*Heat Control Fine Tuning*” knob, you should be able to operate near these same positions each time you operate. If you operate the unit at “start up” setting, you will “carbonize” the ribbon.

- Pick a cone; if it sticks in the stack of cones, twist it off the stack.
- Hold an inch or two of the pointed end of the cone between two fingers and a thumb. With a light flicking action, roll cone in the web of floss building up in the pan. Lift the cone up with the ring of floss attached and rotate the cone to wrap the floss. **DO NOT** roll floss while the cone is inside the pan. This will pack the floss too tightly.
- If the floss fails to stick to the cone, pass the cone near the spinner head to pick up a “*starter*” of melted sugar. Lift the cone out of the pan and wrap the floss with a “*figure eight*” movement of the hand. This leaves giant pockets and makes the final product appear larger. Make sure room humidity is not too high, or the product will be “*heavy*”.
- Work floss away from the center of the machine. You may make several servings, approximately up to 10 at a time, but you will have to stop to allow the machine to cool to prevent the sugar from burning.
- Once you have made the servings, you **MUST TURN OFF THE HEAT SWITCH FIRST**. This step is crucial to prevent sugar from clogging and burning.
- Allow machine to cool for a few minutes.
- When you are ready to make more servings, repeat the above steps.
- When finished, **TURN OFF HEAT SWITCH FIRST**.
- When cool, turn **OFF** the motor switch.

## CLEANING

**PLEASE DO NO ATTEMPT TO CLEAN THIS MACHINE AS PROBLEMS MAY OCCUR.**

