

CONVECTION OVEN

OPERATING

NOTE: ALWAYS USE IN A WELL-VENTALATED AREA AND THIS OVEN IS FOR OUT-DOOR USE ONLY.

NOTE: A COMPLETE 5-MINUTE SHUTDOWN MUST BE OBSERVED BEFORE THE OVEN CAN BE RE-LIT.

1. Make sure oven gas has is attached to the propane tank securely.
2. Make sure the propane valve is turned ON.
3. Make sure the oven is plugged in.
4. Turn the black mode switch to HIGH or LOW.
5. Set the temperature knob to the desired setting.
6. Keep the red switch on auto setting.

NOTE: BEFORE OVEN PILOT BURNER WILL LIGHT, ALL AIR MUST BE PURGED FROM THE PILOT.

7. You will hear a sparking sound. The oven is attempting to light the pilot burner. The sound is normal.

NOTE: THE BURNER MIGHT NOT LIGHT ON FIRST ATTEMPT.

8. If the "red indicating light" comes ON, the oven is calling for heat and the burner is ON.
9. When the "red indicating light" goes OFF, the oven is at temperature and the burner is off.
10. The "red indicating light" will cycle ON and OFF as the thermostat calls for heat.
11. When cooking is complete, turn the MODE Switch to the OFF position.