

INDUCTION COOKER

OPERATING

1. Before turning power on, place cookware on ceramic plate with ingredients inside.
2. Turn on POWER by pressing ON/OFF button once. The power light will turn red and heating will begin.
3. Press REDUCE/INCREASE button for correct heat settings.
4. To select a proper temperature, press the FUNCTION button once (1). Default temp= 360 Degrees F. The temperature light will turn a steady red, and press the REDUCE/INCREASE button until correct temperature is achieved.
5. To select automatic timer setting, press the FUNCTION button twice (2). Default time= 150 minutes. The time light will turn red and press the REDUCE button until the correct time setting is achieved.
6. Once finished cooking, turn cooker off by pressing ON/OFF button once.

USEABLE UTENSILES

COMPATABLE PANS

(steel or cast iron, enameled iron, stainless steel, flat-bottom pans/pots with diameter of 12 to 26 cm.)

NON-COMPATABLE PANS

(Heat resistant glass, ceramic container, copper, aluminum pans/pots. Rounded-bottom pan/pots with the base measuring less than 12cm.)

CLEANING

1. Clean after each use. Disconnect plug and wait until the unit has cooled down.
2. Do not use benzene, thinner, scrubbing brush or polishing powder to clean induction cooker.
3. Wipe down the unit using dish washing agent and a damp cloth.
4. Never run water over the unit.