

REFRIGERATOR

OPERATING

1. Set temperature between 35 and 40 Degrees. Temperature knob is located on the right hand side of the fan.

NOTE: DO NOT USE AN EXTENSION CORD. FAILURE TO DO SO WIL WEAKEN THE EFFECTIVENESS OF THE REFRIGERATOR OR BLOW THE FUSE.