

# TENT HEATERS

## OPERATING MACHINE

1. Connect the electrical cord to an approved electrical outlet.
  - a. A selector switch located on the back of the heater allows heater operation in either HEAT or VENT.
2. Heat Mode Operations:
  - a. Open all manual fuel supply valves. Check for gas leaks using an approved leak detector. The gas control valve in the heater has a manual shut-off feature incorporated into the valve assembly. Ensure the indicator on the valve is positioned to ON.
  - b. Push the selector switch to HEAT.
  - c. Set the thermostat above room temperature.
  - d. The thermostat cycles the heater on and off based set point.
3. Vent Mode Operations:
  - a. Push the selector switch to OFF, then to VENT.
  - b. Only the fan motor will operate. The igniter will not spark, nor will ignition occur.
4. OFF:
  - a. Position the switch to midpoint.