

SNO-KONES MACHINE

MODEL

1888 - Sno-King Sno-Kones Machine

WARNINGS

Never put your fingers or any object into the shaver body (the goose-neck) while the motor is running. Serious injury may occur. (Gold Medal Products does not assume any liability for injury due to careless handling and/or reckless operation of this equipment.)

Always wear safety glasses when servicing this equipment.

Any alterations to this equipment will void the warranty and may cause a dangerous situation. NEVER make alterations to the equipment. Make sure all machine switches are in the OFF position before plugging the equipment into a receptacle.

This machine is not to be operated by minors. A minor is defined by any person under the age of 18.

Machine must be properly grounded to prevent electrical shock to personnel. Do NOT immerse the kettle, warmer or any other part of this equipment in water. Always unplug the equipment before cleaning or servicing.

ELECTRICAL REQUIREMENTS

The following power supply must be provided:

1888: 120VAC, 60Hz, 972W

Danger: Machine must be properly grounded to prevent shock in case of electrical problems. Wall receptacle must be wired as shown on the receptacle. Failure to wire properly will void the warranty and can result in damage to motors, elements, relay, lights, etc.

NOTE: YOUR ELECTRICIAN MUST FURNISH SUFFICIENT POWER FOR PROPER MACHINE OPERATION. WE RECOMMEND THIS SHAVER BE ON A DEDICATED

SNO-KONES MACHINE

AND PROTECTED CIRCUIT. FAILURE TO WIRE PROPERLY WILL VOID THE WARRANTY AND MAY RESULT IN DAMAGE TO THE MACHINE. IT IS OUR RECOMMENDATION THAT THIS MACHINE BE PLUGGED DIRECTLY INTO A WALL OUTLET. THE USE OF EXTENSION CORDS IS NOT RECOMMENDED DUE TO SAFETY CONCERNS, AND MAY CAUSE SACRIFICED AND/OR REDUCED PERFORMANCE.

BEFORE YOU PLUG IN THE MACHINE

1. Make sure the wall outlet can accept the grounded plugs (where applicable) on the power supply cord.
2. The wall outlet must have the proper polarity. If in doubt, have a competent electrician inspect the outlet and correct if necessary.
3. DO NOT use a grounded to ungrounded receptacle adapter.

ICE REQUIREMENTS

This Sno-King can take ice cubes or block ice, if you break the block into pieces approximately two (2) to three (3) inches in size.

NOTE: Ice will not enter the shaving chute if the pieces are too large.

OPERATING MACHINE

1. Load Machine with ice.
2. Close pusher cap, and apply gentle downward pressure.
3. Turn on the power switch.
4. Press and hold in the momentary switch. Release the button once all of the ice has been shaved.
5. Do not lift the pusher cap until the motor is off and the shaver head has stopped.

NOTE: Never allow any foreign or metallic objects around the shaver area of the Sno-King. Ice pick, scoops, and debris that may be in the ice often damage blades.

SNO-KONES MACHINE

CLEANING

1. Wipe the outside parts with a clean cloth
NOTE: Do not use oven cleaners, as they will damage part of the machine.
2. Ammonia cleaners will damage the Lexan Windows. Use only non-ammonia cleaners.